

FITTING GUIDE

TS002 TASSO AIRSOCK to AC



Thank you for purchasing a Tasso AirPod filter. We recommend that you have this fitted by your local dealer or competent mechanic.


Technical specifications of Tasso products are subject to change without notice.



1) UNBOLT AIRBOX, DETACH BREATHER HOSES AND REMOVE.




2) DETACH CHARCOAL FILTER FROM HOLDER AND REMOVE

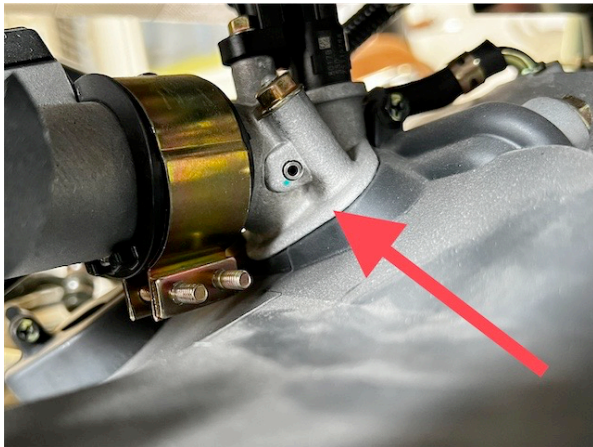

3) REMOVE VAC TUBE FROM INLET MANIFOLD



4) REMOVE AIRBOX AND CANISTER ASSY

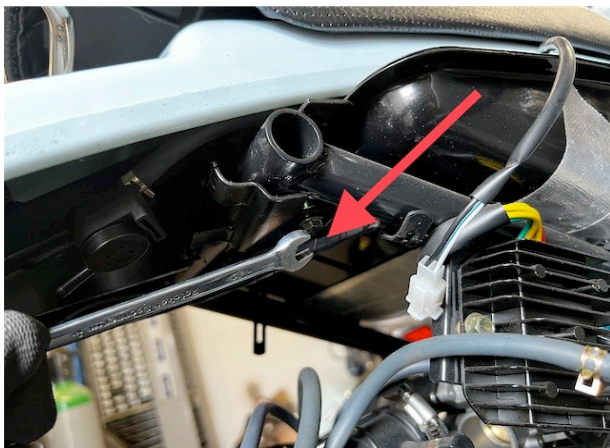


5) UNBOLT SUPPORT BRACKET AND REMOVE



6) USING SPARE TUBE FROM AIRBOX ASSY, REFIT FUEL SHUT OFF VALVE AS ABOVE. MUST BE IN CORRECT UPRIGHT POSITION AS SHOWN



7) CUT 5cm LENGTH FROM ORIGINAL VAC PIPE AND FIT BLANK PLUG INTO HOSE END.

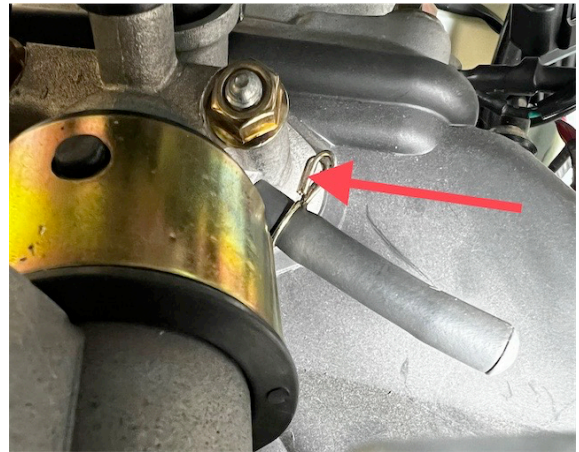

8) FIT BLANKED PIPE ONTO INLET MANIFOLD




9) Remove Elbow from airbox, cut at 5 ribs and fit airsock securing with cable tie supplied



10) Using existing tubing assemble as shown. Arrow notes fitting of breather pipe from head to t-piece.



11) Secure assembled elbow to throttle body.

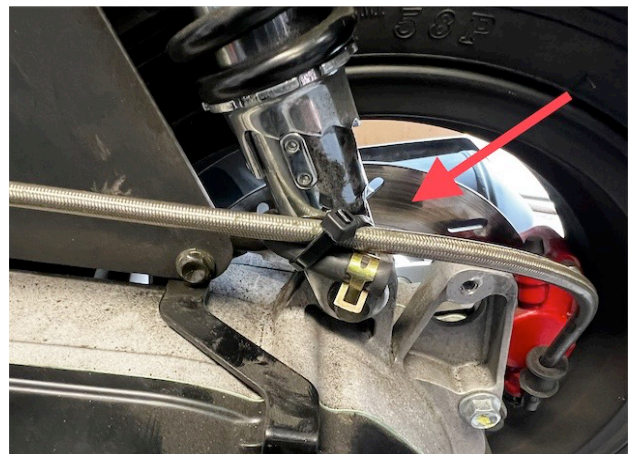

12) CABLE TIE BRAKE HOSE AND GEARBOX BREATHER PIPE AS SHOWN ABOVE. Do not over tighten breather pipe.

Disclaimer

We accept no responsibility for damage to motors when fitting or using this exhaust, for any damages consequential, incidental along with any expenses or injury directly or indirectly incurred from the use of the exhaust system. It is important to ensure PRIOR TO INITIAL USE that you check all necessary fixings and screws and that they are properly secured. The onus is on the person who fits the exhaust to ensure that all nuts, fixings, clearance and alignment prior to initial use.